




P.O. Box 1719  
 Corona, CA 92878  
 Support: 951-493-7100  
 www.aFeFilters.com

# Intake Kit Installation Instructions: '07 Chevrolet Tahoe/ Suburban/ GMC Yukon/ Yukon XL V8-5.3L


<b>Kit Part #</b>	51/54-81072	<b>Tools Required:</b>	<b>Part List:</b>	
<b>Make:</b>	Chevrolet	5/16" nut driver or slotted screwdriver	1 Air filter Replacement P/N ( 24-91007	4 Clamp #060
<b>Model</b>	<b>Year</b>	<b>Engine</b>	Pro Dry S 21-90015 )	2 Coupler straight 4"x2"
Tahoe	'07	V8-5.3L	1 Intake tube	9 Screw, button Head M6x1
Suburban	'07	V8-5.3L	1 Intake housing	1 Brass nipple 3/8" ID x 1/4" NPT
<b>Make:</b>	GMC		1 Intake housing cover	12" 3/8" Breather hose
<b>Model</b>	<b>Year</b>	<b>Engine</b>	1 Air filter adapter	5 Washer Wavy, M6
Yukon	'07	V8-5.3L	2 Coupler, reducer 4x3 3/4"	
Yukon XL	'07	V8-5.3L	1 Clamp #072	
			1 Clamp #064	




**Step 1**  
 Complete intake kit. Please verify all components are present prior to beginning installation.

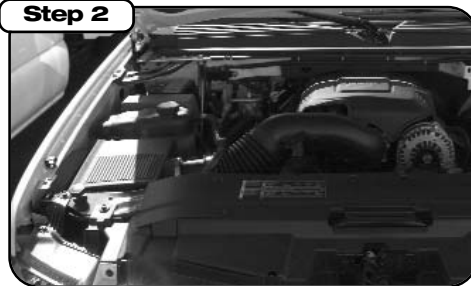

**Step 2**  
 Complete stock intake system.

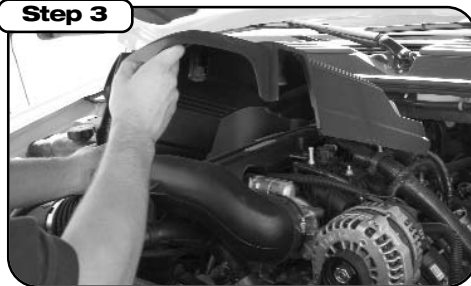

**Step 3**  
 Remove engine cover, lift up and pull out.

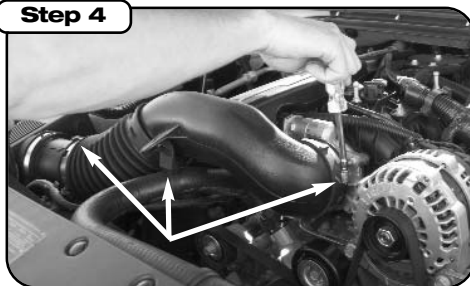


**Step 4**  
 Loosen clamps and pull the intake tube/hose mount off. Disconnect the crankcase breather hose. Remove the intake tube.



**Step 5**  
 Loosen the clamp attaching the MAF sensor to the intake housing. Remove the MAF sensor.




**Step 6**  
 Lift up and out to remove the stock air box.

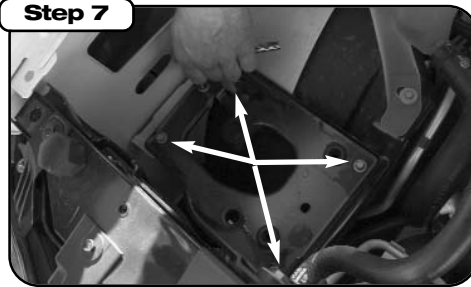


**Step 7**  
 Remove the 4 bolts that fasten the air box mounting plate. Save these bolts for later use.



**Step 8**  
 For extra air remove the rubber flap on the inside part of the air box area.

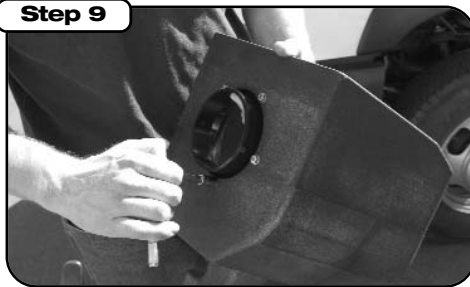

**Step 9**  
 Using 5 M6 button head screws and 5 wavy washers fasten the air filter adapter to the aFe intake housing.

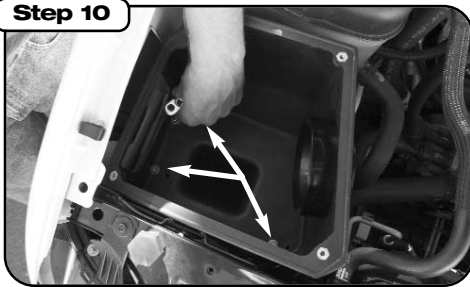

**Step 10**  
 Using the 3 bolts from the stock mounting plate fasten the aFe airbox on the chassis.




**Step 11**  
 Using the reducer coupler, clamp the MAF sensor onto the aFe housing. If this is a flex-fuel vehicle, use second reducer coupler between sensor and intake tube.



**Step 12**  
 Attach the aFe intake tube onto the MAF and throttle body. Secure the clamps when properly positioned. Connect the supplied crankcase breather hose to the intake tube.



**Step 13**  
 Insert and fasten the aFe air filter.

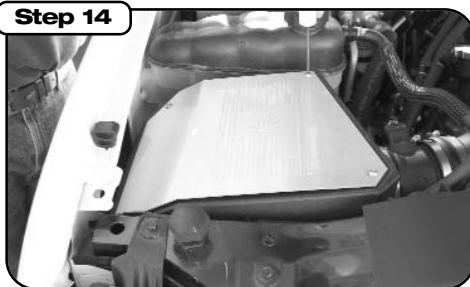

**Step 14**  
 Fasten the housing cover to the air box. Using 4 supplied button head screws.



**Step 15**  
 Your installation is now complete. Make sure to tighten all clamps and check all electrical connections. Re-check periodically.

**Note:** Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil or aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil). Filter Replacement: Magnum FLOW PN: #24-91007 (black w/blue media). Pro Dry S P/N 21-90015 (black w/white media) Pro Dry S cleaning: see cleaning instruction sheet 06-00074